

201220 259T800T

100 →

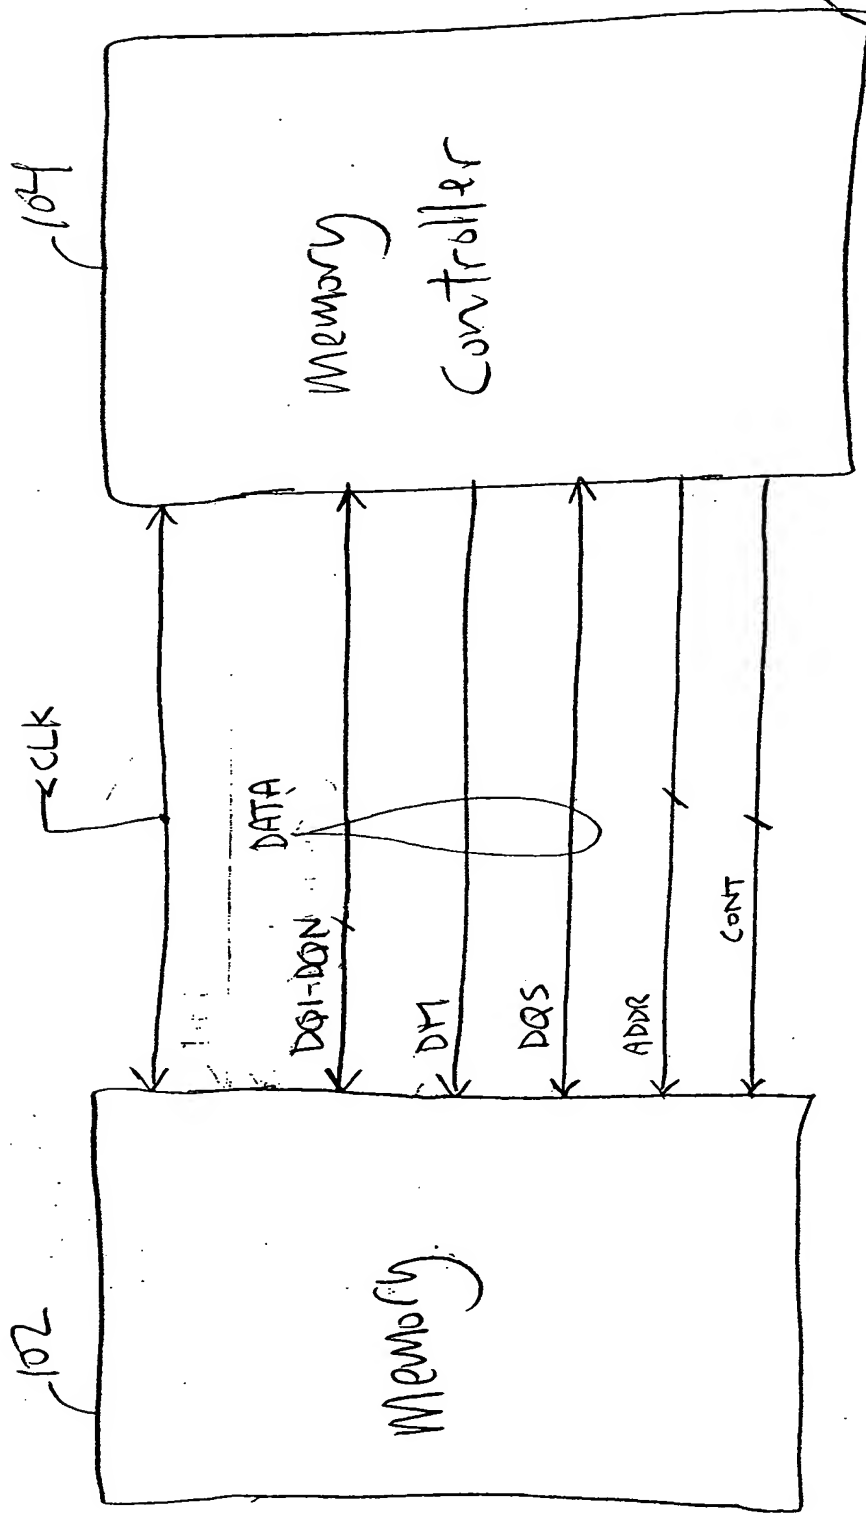


Figure 1  
(Background Art)

20T220" 259T800T

DQS

DQ1-N  
(no transitions)

PDQ

DQ

DQ1-N  
(2 of signals transition)

PD1

D1

DQ1-N  
(all signals transition)

PDZ

DZ

T0 T1 T2 TAC T2

Figure 2 (Background Art)

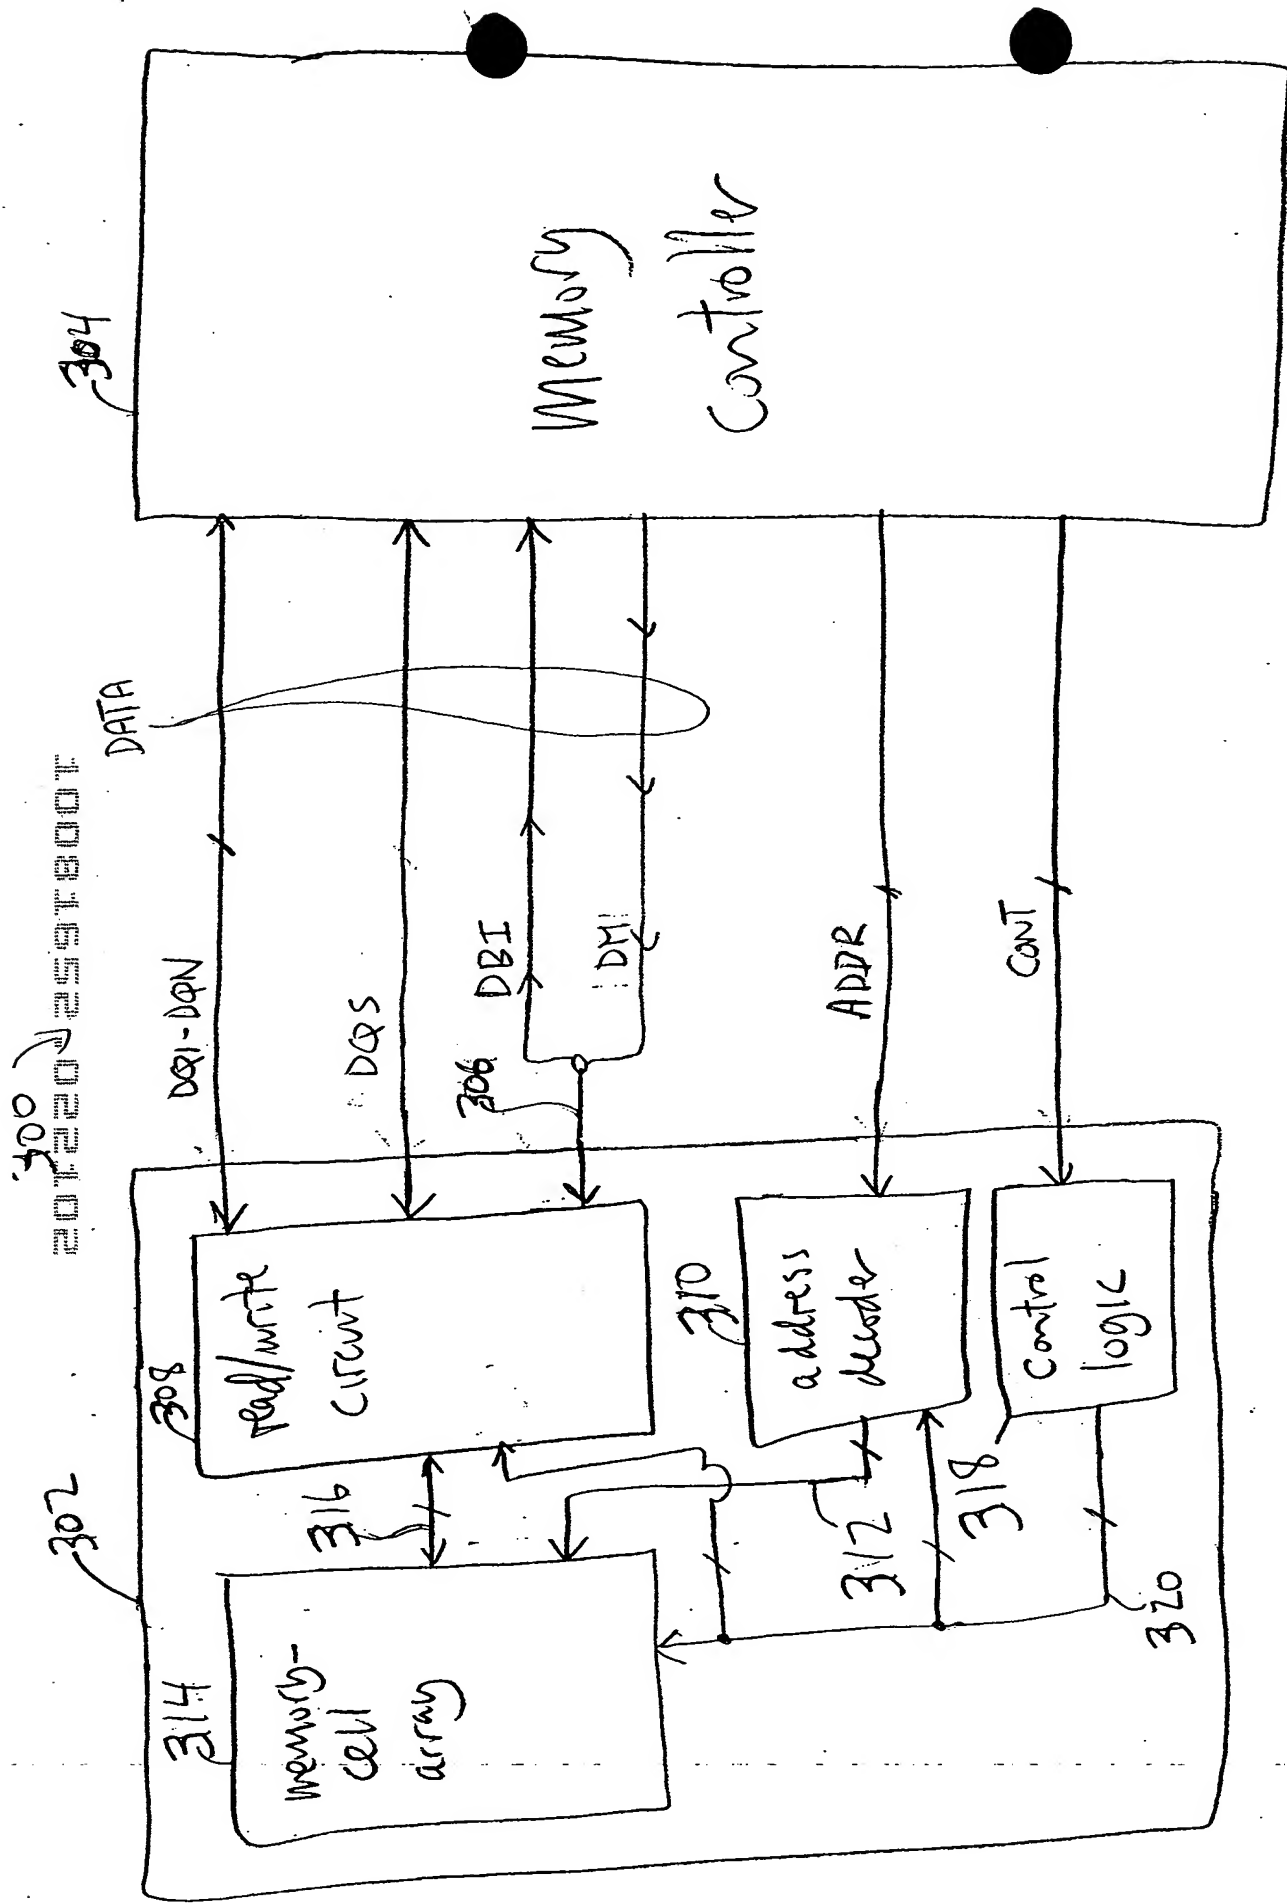


Figure 3



108

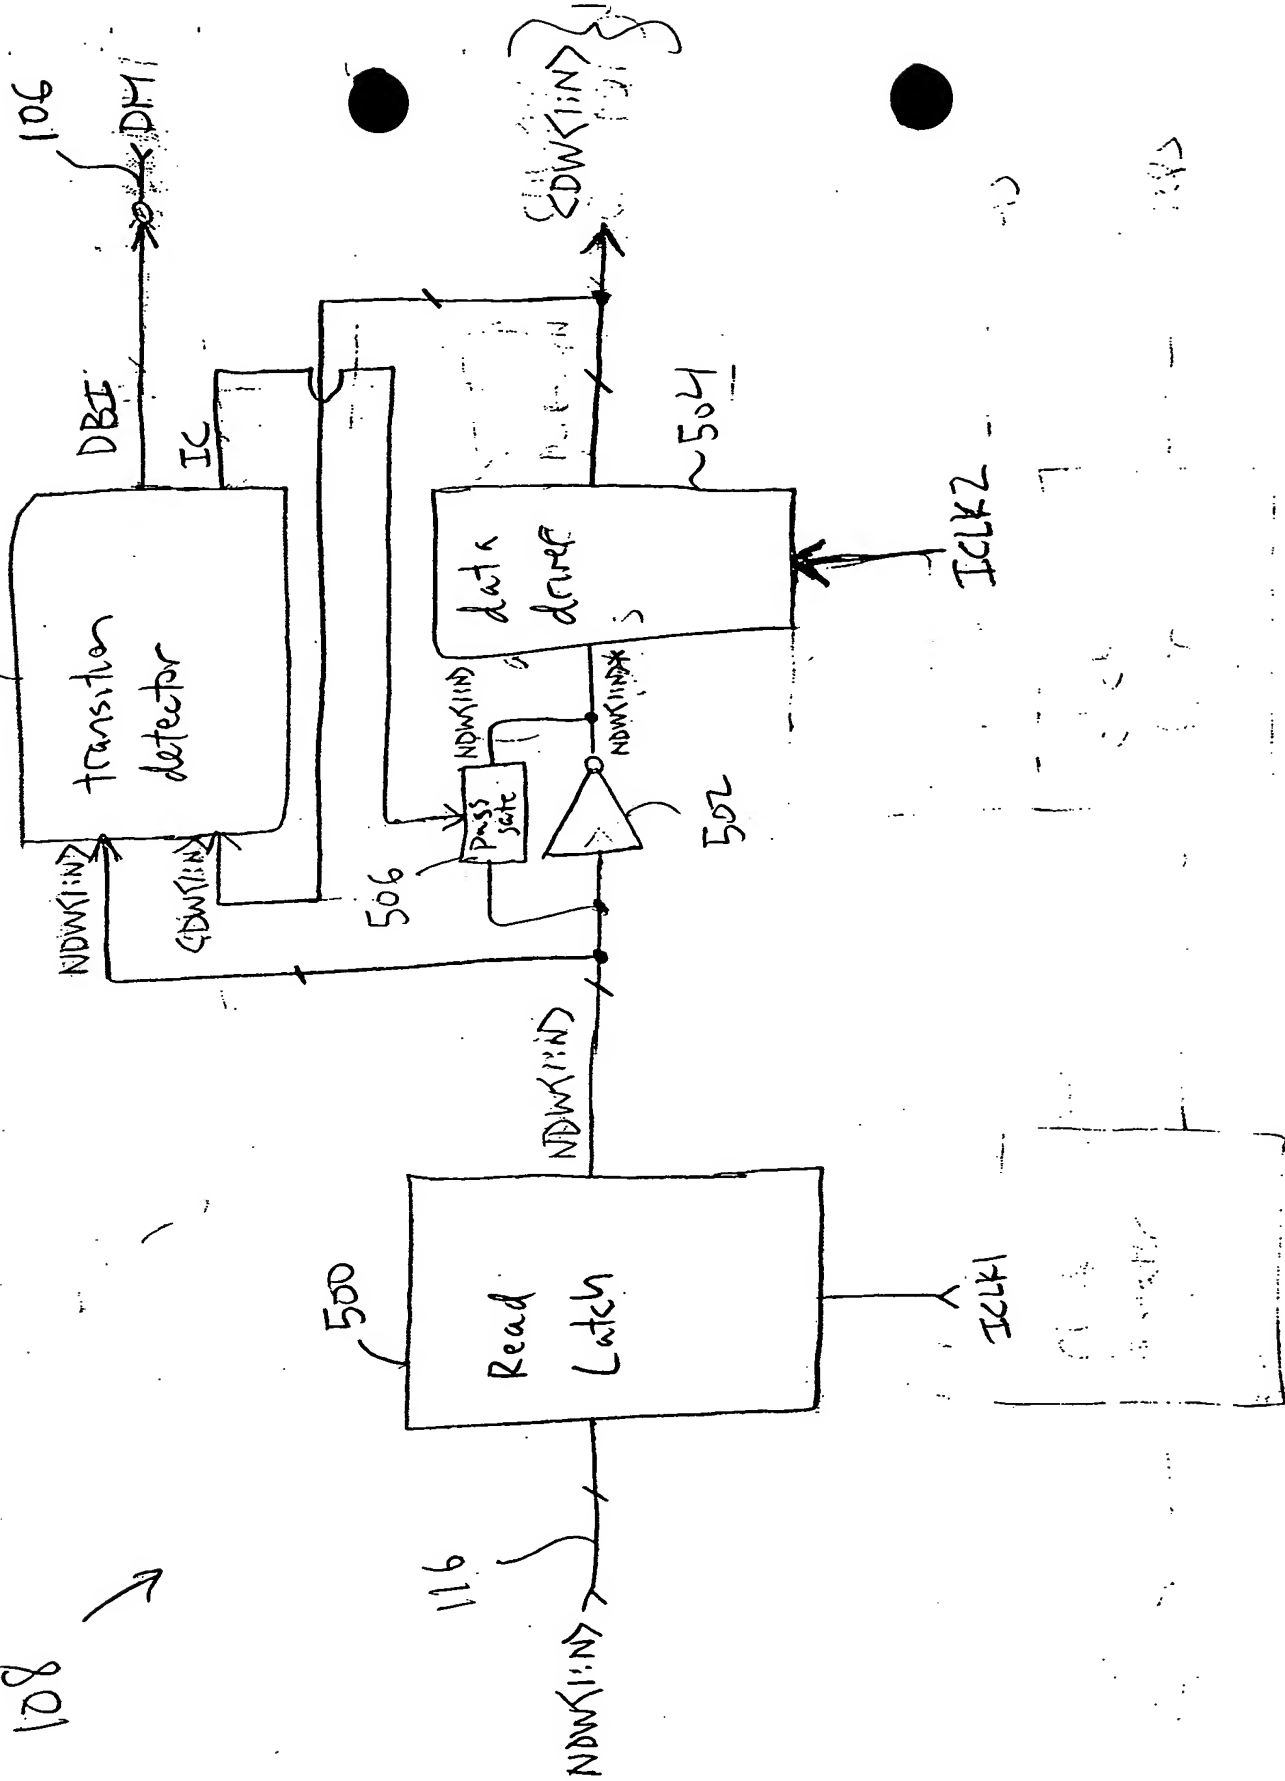


Figure 5

600

604

602

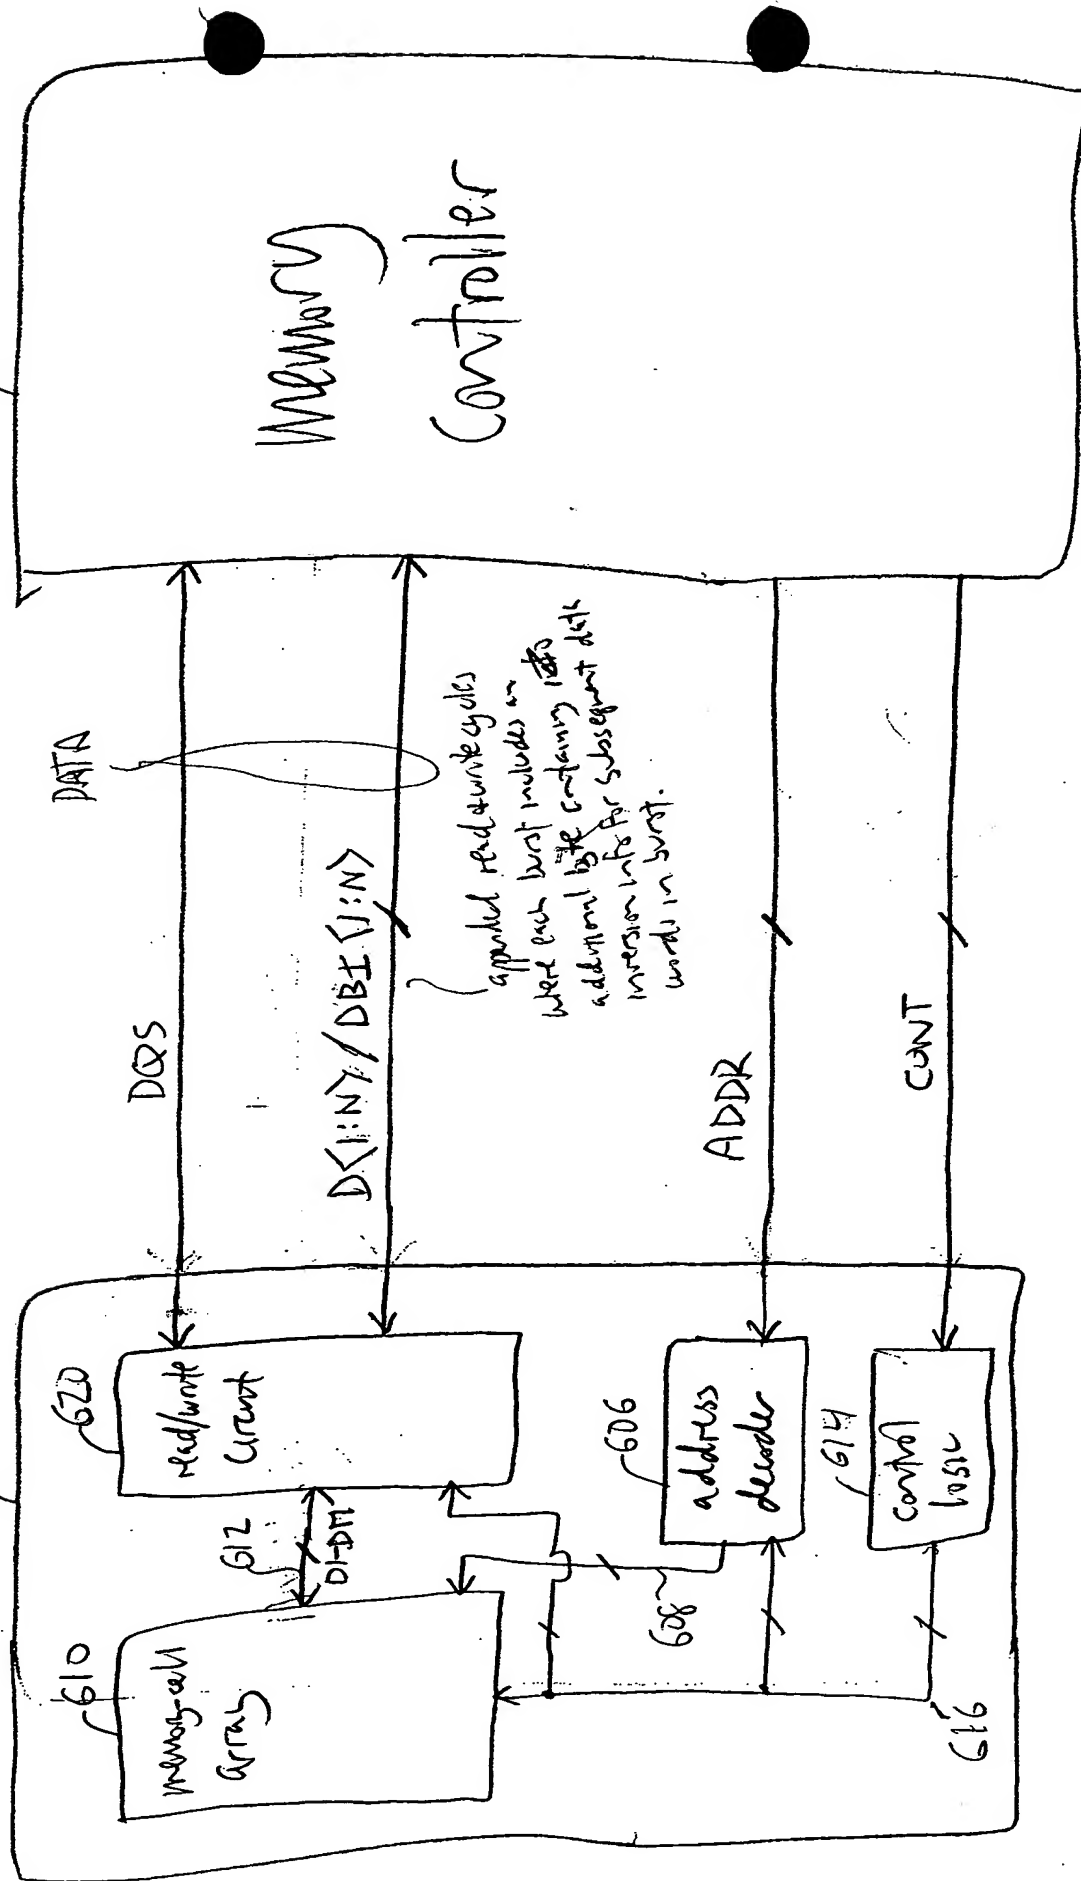


Figure 8

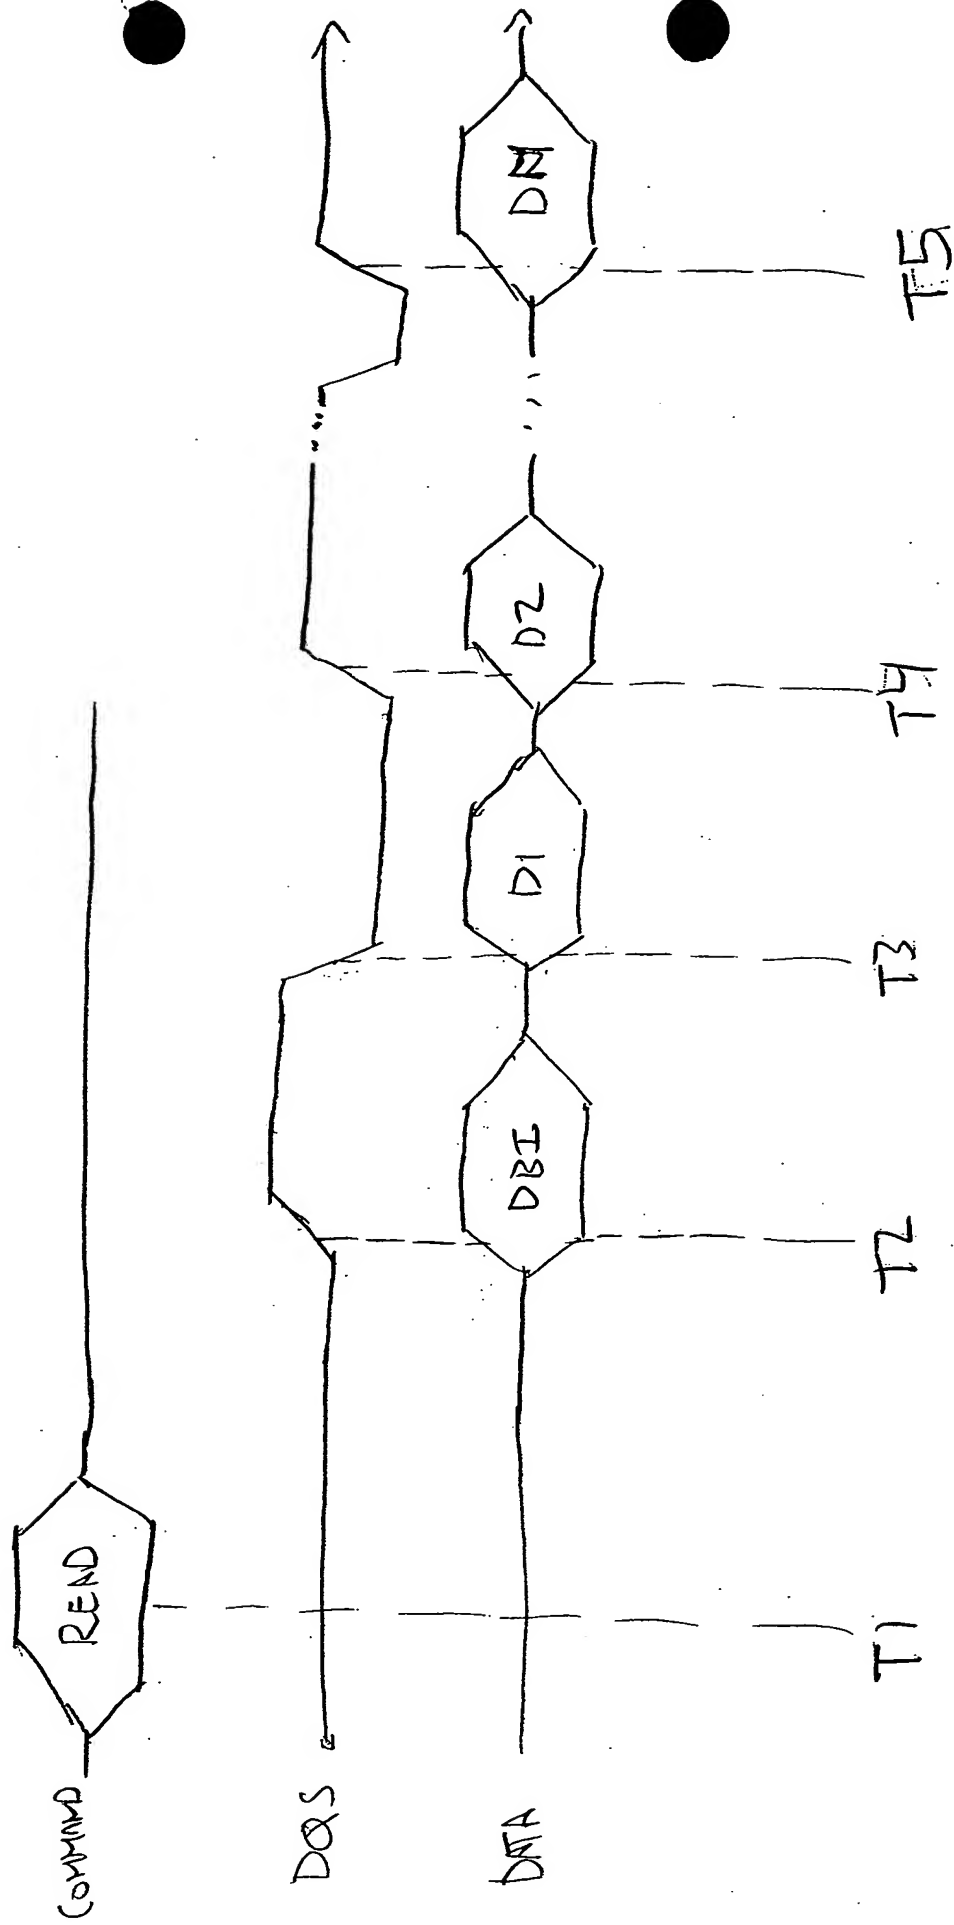
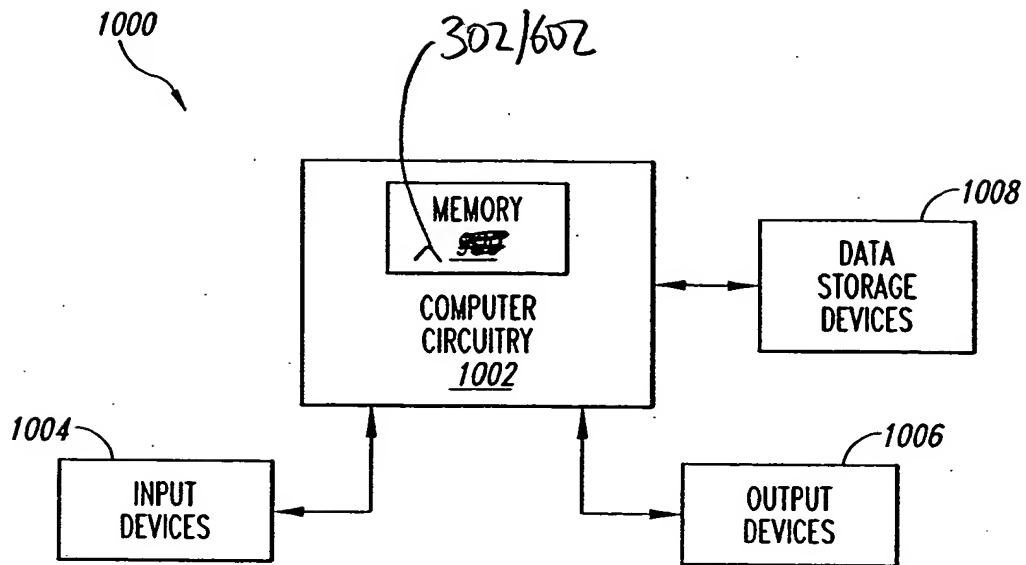


Figure 7

	<u>DBI</u>	<u>D1</u>	<u>D2</u>	<u>D3</u>	...	<u>D7</u>	<u>D8</u>
I1	0	1	0	1		1	0
I2	1	1	0	1		0	0
I3	1	1	0	1		1	0
I4	x	1	0	1		0	0
I5	x	1	0	1		1	0
I6	x	0	0	1		0	0
I7	x	1	0	1		1	0
I8	0	0	1	0		0	0
		$I1=0$	$I2=1$	$I3=1$			$I8=0$

Figure 8 -





*Fig.*

9

20160220-259T800T

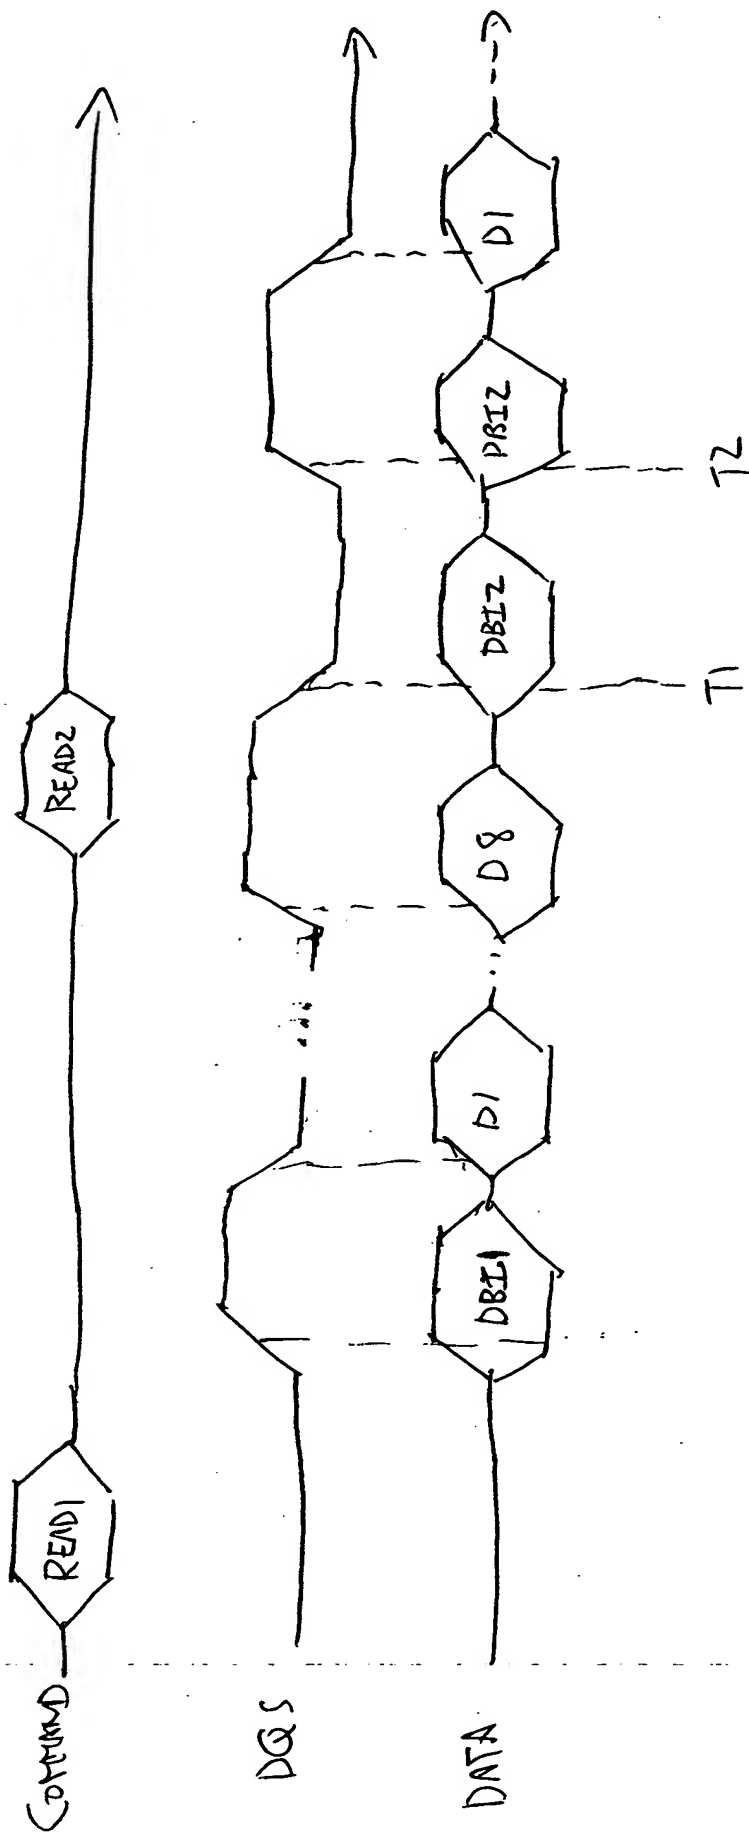


Figure 10